



Yogurt maker instructions

Non-electric:

Please read before use.

- This Yogurt Maker is for household use only. It is not suitable for commercial use, or for use outdoors.
- The Yogurt maker is not intended for use by children or infirm people unless they are adequately supervised.
- Always keep out of the reach of Children.

To use yogurt maker:

1. Place the yogurt maker on a flat dry surface, away from hot ovens, gas and electrical hobs, and way from any source of vibration, washing machine or fridge etc.
2. Prepare the inner pot, as in the Yogurt Making instructions, and fit the top, the contents should be at room temperature.
3. Pour Boiling water into the Base, filling up to the Maximum Line, which is the same level as the top of the Piers on the bottom of the unit, being careful not to over fill.
4. Careful place the inner container into the Yogurt Maker, taking care not to drop into the water.
5. Secure the Yogurt Maker Top, by lining up the catches and twisting top to engage these.
6. Once the Yogurt Maker is in use, please do not move it. Place away from any source of vibration, washing machine or fridge etc.

Care and Cleaning

Wash the inner pot and Yogurt Maker in Hot Soapy Water.

Useful links:

To reorder

- [Yogurt cultures- 1litre sachets](#)
- [Yogurt maker instructions](#)
- [Soft cheese cultures-1litre sachets](#)

For social media and web shop

- [can be found here](#)

If you require and additional information or have any questions,
please contact us via

- Email – sales@jkm-foods.com
- Phone - 0345 8338155